

Mountain Boy sledworks




Instructions to Assemble Your Butterfly As a Wagon

Your new Butterfly arrived ready to be assembled as either a wagon or a pull sled. On this side of the instruction sheet are instructions for assembling the Butterfly as a wagon. Turn it over for instructions on assembling the Butterfly as a pull sled.

Step 1: Identify the different parts of the Butterfly that you will use to assemble it as a wagon (Fig. 1). These include the body, front and rear wheel units, and handle. A screwdriver and wrench, 7 bolts and 7 nuts are included.

Step 2: Using the bolts and nuts provided, attach the front (3 bolts) and rear (4 bolts) wheel units. (Fig. 2).

Step 4: Attach the pull handle (Fig. 3). Check all screws and bolts to make sure they are tight but allow the wagon to turn easily.

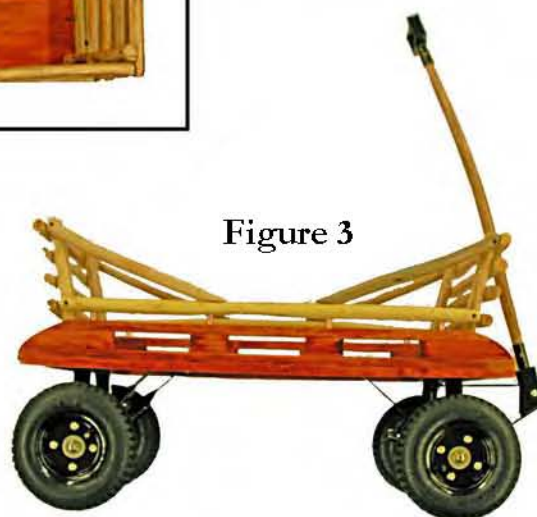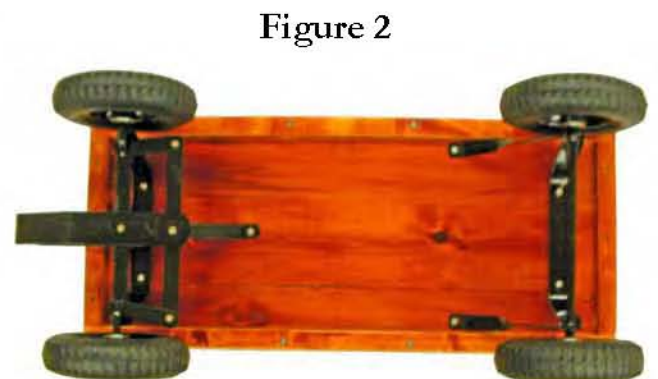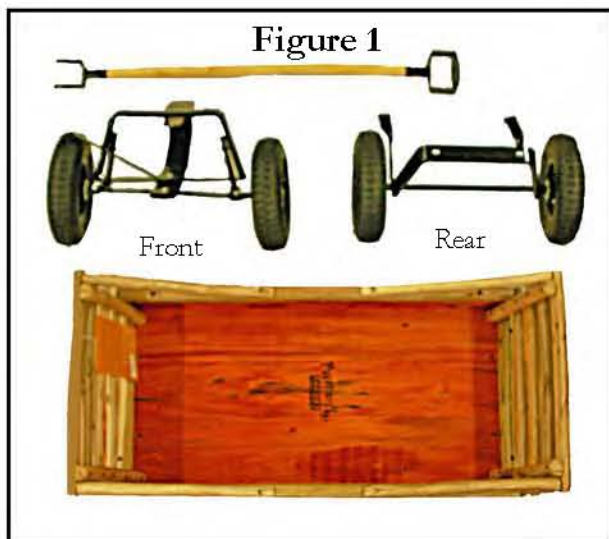

Please don't hesitate to call us with any questions at (800) 989-5077.

WARNING! Adult Assembly Required

Choking Hazard: small parts not suitable for children under age 3.

Suffocation Warning: packaging should be kept away from small children.

Instructions to Assemble Your Butterfly As a Pull Sled

Your new Butterfly arrived ready to be assembled as either a wagon or a pull sled. On this side of the instruction sheet are instructions for assembling the Butterfly as a pull sled. Turn it over for instructions on assembling the Butterfly as a wagon.

Step 1: Identify the different parts of the Butterfly that you will use to assemble it as a pull sled (Fig. 1). These include the body, two runner supports, runners, and pull rope. A screwdriver and wrench, 6 bolts and 8 screws are included.

Step 2: Using 4 of the bolts, attach the two supports as shown in Figure 2.

Step 3: Using the other 2 bolts, attach the front of the runners tightly to the end of the body. Then, one by one, screw the runners into the supports. Start by pushing down and aligning the runner, and put in just one screw. Then, align the runner with the supports and put a screw into the other support. Next, put in the other two screws (see Figure 3). Finally, attach the red pull rope by tying it through the holes at the front of the runners.

Figure 1

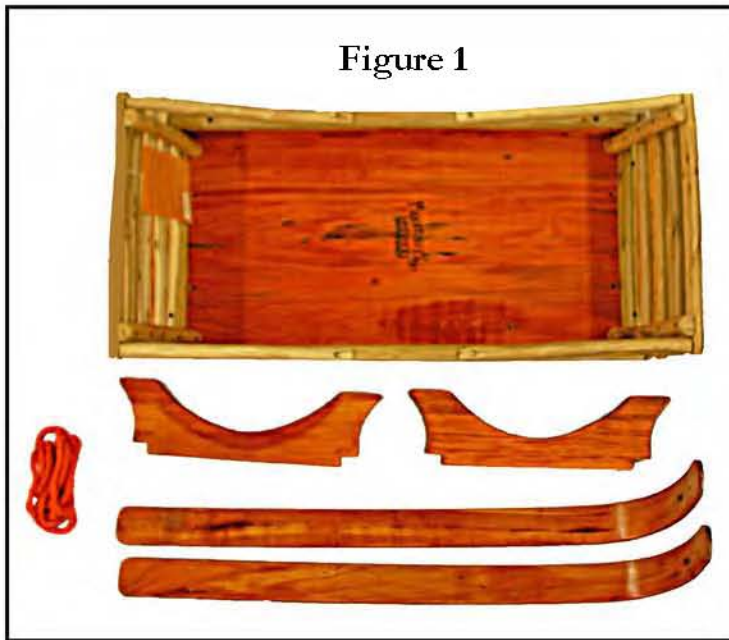


Figure 2

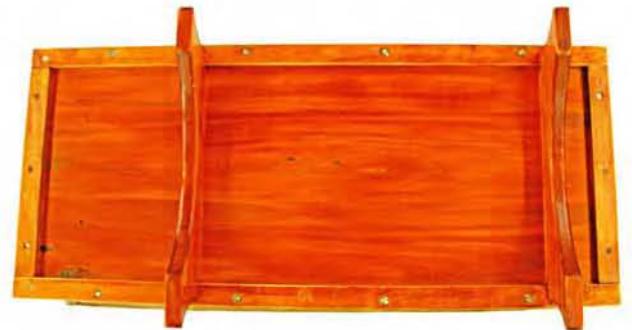


Figure 3

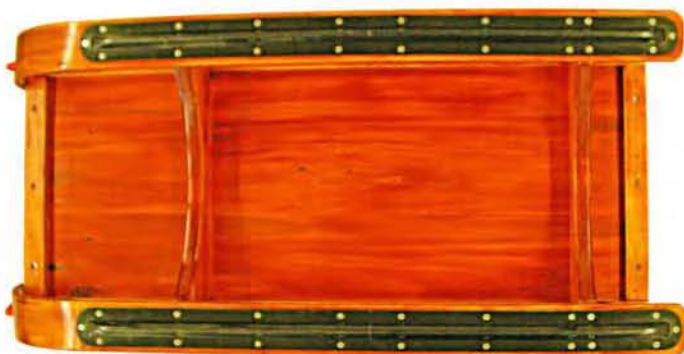


Figure 4



Please don't hesitate to call us with any questions at (800) 989-5077.